

First Toddle® - Assembly Instructions

- See “The First Toddle® Child Development Guide” for more info on using First Toddle®.
- For photo instructions, see www.firsttoddle.com or send an e-mail to info@firsttoddle.com.
- Vertical Support Posts packaged at medium height (22”). Dis-engage or re-engage white spring buttons to align Upper Horizontal Parallel Bars to low (17”) or high (27”) settings.
- **Caution: Adult supervision required. Never leave children unattended. Please keep all information (including box/supporting information) for future reference. Primary Walker engineered to easily hold the weight of just a few children – at no time should child (or adults) stand on upper horizontal bars.**

What’s Included:

Primary Walker	Mesh Tent/Crawl-Thru	Mini-Basketball Backboard	Play Floor Mat
Sports Ball Set (2)	Mini-Soccer/Hockey Goal	Mini-Hockey Stick	End-Activity Play Table
Soft Suspend-able Bears (2)	“The First Toddle® Child Development Guide”	Velcro Straps (6) - suspend lightweight, soft crib/play items (*items not included)	Large Soccer/Hockey Net

Play Floor Mat

Lay Play Floor Mat flat on floor. Place assembled Walker on Play Floor Mat and position each of the Walker’s 4 outer base corners under a corresponding corner strap on the Mat. Best to put Play Floor Mat on carpet, blanket or other soft surface.

Primary Walker

2 Horizontal Base Supports (4 “L-shaped” pipes -- long blue pipe joined to short red pipe with yellow elbow coupling) - Insert ends with white spring button into green couplings and engage button. Insert short ends of assembled Base Support into open yellow elbow coupling at base of Vertical End Supports and engage button.

Vertical End Supports packed in medium height setting (22”). For younger children (less than 12 months) set height to lowest setting (17”) by disengaging white spring buttons and pushing top of Vertical Posts to the base (no white spring buttons engaged).

Disassembly is opposite. To detach Base Supports from Vertical End Supports, wrap 4 fingers around red, short pipe and use thumb to simultaneously a) press white button and b) push end of thumb against yellow elbow coupling at bottom of Vertical End Support.

2 Horizontal Upper Parallel Bars (4 straight pipes, 2 with green straight coupling) - Insert ends with white spring button (1” from end of blue pipe) into ends with green couplings and engage button. Insert ends of each assembled long bar into open yellow 3-way coupling at top of opposite Vertical End Supports and engage button.

Disassembly is opposite. To detach Upper Parallel Bars from yellow 3-way coupling at top of Vertical End Supports, press white button while holding adjoining sections and gently twist and pull.

Accessories

End Activity Table - Open three (3) Velcro straps. Position table over ends of Walker. Attach Velcro straps around Upper Horizontal Bars (1 short end bar, 2 long side bars).

First Toddle® - Assembly Instructions (continued)

Tent / Crawl-Thru - Raise Primary Walker to highest setting. Drape tent net covering over Walker, slip corner straps over 4 base corners, wrap loose strap with Velcro end under base corner and around to attach at top of corner.

Large Soccer/Hockey Goal - Raise Primary Walker to the highest setting (same as with Tent / Crawl-Thru). Remove one Horizontal Base Support. Drape soccer/hockey net covering over Walker, wrapping end over rear base of goal (remaining Horizontal base Support) and front loops around open fittings on base of Vertical End Supports.

Miniature Basketball - Attach backboard clip to any horizontal bar, supporting sides of backboard by Vertical End Supports. Backboard can be attached when Walker is positioned horizontally (as Primary Walker) or vertically (with Walker resting on one end). Backboard should not be attached on the inside of the upper support structure.

Cloth Toys - Attach strap from toy bear's back to horizontal bar using Velcro or place bear on End Activity Table.

Attach other plastic and cloth crib toys from around the house using 6 Velcro Straps. Wrap Strap around Horizontal Bar attaching 2 Velcro sections at one end of Strap. Attach toys using 2 Velcro sections at opposite end of Strap. Rearrange the position of the Velcro Straps and the play items suspended to keep it interesting and fun.

Miniature Soccer/Hockey Goal

Attach separate pipe with two 90-degree end couplings. Drape net over goal, wrapping end over rear base of goal and front loops around bottom of front goal posts. Position goal aligned with Vertical End Supports.

Walker with any accessories can rest on carpeting or blanket for hours of fun for children.

Cleaning Instructions

Wipe plastic and soft EVA parts with a clean cloth dampened with anti-bacterial spray, or apply anti-bacterial cleaner directly on parts and wipe dry. Wash any cloth components (Play Floor Mat, Velcro Straps, Netting) in cold water with regular laundry detergent, gentle cycle with like colors; dry with delicate heat or air dry. Do not use bleach.

Warranty / Returns

Thirty (30) day limited warranty. Returns accepted within 30 days of ship date with all original parts undamaged in original box. Credit issued after inspection (less original S&H and 15% restocking fee). Buyer assumes responsibility for use and care of First Toddle®. In no event shall seller's liability exceed the purchase price of the product.

Important: Call First Toddle® Customer Service (877-377-8635) first to request a Return Merchandise Authorization number (RMA). List RMA on return shipping label as shown below.

First Toddle® - Assembly Instructions (continued)

Ship to:

First Toddle, Inc.
4340 E. Indian School Rd.
Suite 21-174
Phoenix, AZ 85018
RMA #: *-list RMA # here-*